


## Box Assembly Instructions

### STEP 1

Remove the box from shrink wrap and lay flat, white side facing up. The longer panels should be to the left and right. Place the 2 single boards to the side.

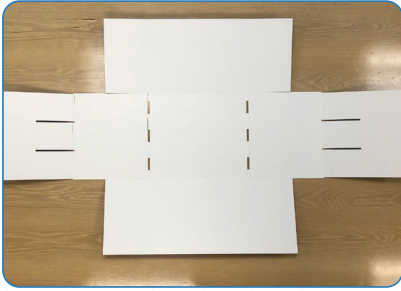

### STEP 2

Fold the top and bottom panels up and fold their side flaps in. Use your hand to help keep the panels upright.




### STEP 3

Using your other hand, fold up the long panel that is still on the table.



### STEP 4

Fold the remaining portion of the long panel over and lock it in by pushing the notches into the cut outs. Repeat steps 2-4 on the other side of the box.

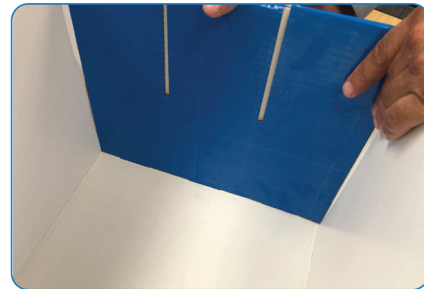

### STEP 5

Place the folded box on the table with the BLUEPRINT logo facing up. Take the two single boards and slide them into the grooves to create the dividers.

